

Installation Instructions







- 1. Stretch top 1/2 of the TireSocks over each tire. The TireSocks should only stretch over the back side of the tire by 1-2 inches.
- 2. Turn the machine ON and drive forward to rotate tires 180 degrees.
- 3. Stretch the other 1/2 of each TireSock over tires to complete installation.



NOTES

- To remove, pull the top section of the TireSock completely off each tire and drive the machine forward.
- Ensure no part of red center is overlapping tire tread. Do not drive on seam.
- TireSocks are designed for use on interior projects and flat level surfaces.
- TireSocks will last longer if the machine is always in motion while turning and not used on wet, rough, or exterior concrete.

Questions? Call Us 1.888.SOCK.911

WARNING

The machine should always be OFF with the key removed during each step of the installation and removal of this product.